Leader Light s.r.o. M.Gorkeho 33 SK-052 01 Spisska Nova Ves Slovakia www.leaderlight.eu

USER MANUAL

LL PRO NEO II



1 pc.


1 pc.

1 pc.

All dimensions are in millimeters

A=1500mm/59" | B=160mm/6.3" | C=214mm/8.4"

COMPLIMENTS ON YOUR PURCHASE!

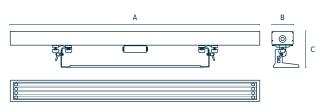

Following items are included:

- LL PRO NEO II with RGBW T5 tubes and brackets

- Power plug PowerCon "A" and "B"

- User manual

Additional items needed:

- Data cables with XLR 5pin
- Controller DMX compatible
- Screws and washers 4xM

Content:

01 SAFETY INFORMATION

01.1 Protection from electric shock

01.2 Fire prevention

02 PRODUCT SPECIFICATION

02.1 Technical Specification

02.2 Back panel

03 INSTALLATION

03.1 Unpacking

03.2 Physical installation

03.3 Connecting to AC power

03.4 Control data connecting

03.5 DMX channels

04 MAINTENANCE

01 SAFETY INFORMATION



WARNING!!!

Carefully read before installing, powering or servicing.

Nothing to do if anything misunderstand! Installation can be done only by a qualified professional in accordance with relevant local codes.

01.1 Protection from electric shock

- Shut down power before installation or maintenance.
- Luminaries and recommended AC power supply must be installed by a qualified professional in accordance with relevant local codes. Only acceptable source of AC power and frequency that complies with local building and electrical codes to use.
- Do not use or do not connect the products if the power cable, power plug or fixtures are any way damaged, wet, or if they are overheating.
 Do not modify, after, or aftempt to service the LeaderLight appliance. Doing so will void the
- Do not modify, alter, or attempt to service the LeaderLight appliance. Doing so will void the warranty.
- Before removing or installing any cover or part of appliance disconnect it from AC power.
- Appliance always connect to earth (eltech.).

01.2 Fire prevention


- Follow all safety consideration.
- Thermostatic switches or fuses never to bypass.
- Device never shield minimum distance around ventitaling slot must be 50mm (2 in.).
- Allowing max. ambient temperature is 40°C (104°F).

02 PRODUCT SPECIFICATION

02.1 Technical Specification

| Lamp type: | 1500mm: 4xT5 HE 35W or HO 80W * |
|-----------------------|--|
| Lifetime: | 20 000 hours |
| Control data Input: | DMX 512 In/Out with XLR 5pin |
| Max. input power: | T5 35W:150W, T5 80W:330W |
| Power connection: | 200-264V, 47-63Hz AC In/Out PowerCon |
| Net weight: | 11kg |
| IP: | IP20 |
| Ambient temp. (Ta): | Maximum 40°C |
| Materials and finish: | Housing: powder-painted anodized aluminium in black (other colours on request) |
| Installation: | Surface mounting |
| | |

02.2 Back panel

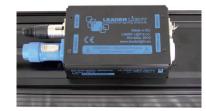

Control LEDs Indication

| LED | INDICATION | STATUS | |
|----------------|---------------------|---|--|
| POWER (Green) | blinking –1Hz | OK - inside fixture is everything correct | |
| DATA (Yellow) | light off | NO DMX512 signal | |
| DATA (Yellow) | blinking – 4Hz | OK- income correct DMX512 signal | |
| DATA (Yellow) | fast blinking | NON correct digital signal | |
| POWER (Green) | alternate blinking | Auto Run | |
| DATA (Valleur) | alternate billiking | Auto Run | |

POWER DATA

03 INSTALLATION

03.1 Unpacking

- Unpack carefully.
- This is electronic equipment and should be handled carefully.
- Damaged delivered package or if are any mechanical parts broken it must be claim immediately by the transport company. Photo pictures as evidence are valuable for future claim.

03.2 Physical installation

- Loading capacity of bearing area has to be at least 10 times the weight of all device clusters (luminaries, clamps, cables, ...).
- Hairbreadth from combustible materials is 0.5m.



1. Instalation adjustable brackets to body LL PRO NEO

RECOMENDATION!

Before start, in order to obtain the full 20.000 hour life time, new fluorescent tubes must be burned in for 100 hundred hours at full power.

03.3 Connecting to AC power

- To tackle all Safety Information- 01!
- For protection from electric shock, the device must be grounded (earthed)!
- It is not necessary to open the fixture before power supply. Power supply is solved simple with Neutrik PowerCon connectors.
- The fixture is equipped with auto-switching power supply that automatically adjusts to any 50-60Hz AC power source from 100-260V.
- Cord plug connections:

| Symbol | Pin | Wire Colour | Screw (US) |
|------------|----------------|--------------|-----------------|
| L | live | brown | yellow or brass |
| N | neutral | blue | silver |
| (4) | ground (earth) | yellow/green | green |

03.4 Control data connecting

- Control data cable length is specified by Norm IEC929 Annex E4.
- It is not necessary to open the fixture before connecting of DMX512 control signal.
 Interconnections are realized by Neutrik XLR 5pin In/Out connectors.
- Pin connections:
 - Pin 1 ground
 - Pin 2 signal negative
 - Pin 3 signal positive

03.5 DMX channels - subject to change

- The latest version of DMX channels appendix are on the websites - www. leaderlight.eu

| Ch. | Mode1: Dip2=Off Dip3=Off | Mode2: Dip2=Off Dip3=On | Mode3: Dip2=On Dip3=On |
|-----|-----------------------------|--|--|
| 1 | Red | Red | Red |
| 2 | Green | Green | Green |
| 3 | Blue | Blue | Blue |
| 4 | White | White | White |
| 5 | | Preheat (0-30%=No Preheat, 30%-70%=Preheat Type1, 70%-100%=Preheat Type2 | Preheat (0-29%=No Preheat, 30%-69%=Preheat Type1, 70%-100%=Preheat Type2 |
| 6 | | | Master |

Preheat Type1 = Preheat - hEATING / Preheat Type2 = min. level

| Functions DipBCD (rotating switch RS1-"100", RS2-"10", RS3-"1") | |
|---|---|
| DipBCD = 000 | = DMX address 001 (AutoReset-Generate reset function if you switch off/on power supply) |
| DipBCD = 001 - 512 | = DMX address 001 - 512 |

| Functions Dip (switch Dip1, Dip2, Dip3, DIP4) | | |
|---|---|--|
| Dip2 = On | = add Master channel | |
| Dip3 = On | = add Preheat channel | |
| | | |
| Dip1 = On, Dip4 = Off | = AutoTest: all channels on 100% | |
| Dip4 = On | = AutoRun: functions rotating switch: | |
| P - | RS1 = Program 0-9, RS2 = StepTime, RS3 = FadeTime | |

| Order code | Product name |
|--------------|--|
| LL05 405.1 | LL PRO NEO II 4x80W/35W RGBW |
| Accessories: | |
| LL05 674.1 | LL BARNDOOR PRO NEOII 1500 |
| LL05 690 | LL DIFFUSION GLASS PRO NEO II 1500 (LL05 400) |
| LL05 700.1 | LL BRACKET PRO NEO II FIX |
| LL05 T5-8xx | LL T5 FILTER 80W - 10 colours (colour on request) |
| LL05 T5-5xx | LL T5 FILTER 54W - 10 colours (colour on request) |

Note: delivery with lamps


04 MAINTENANCE

- To tackle all Safety Information- 01!
- Damage caused by inadequate cleaning or maintenance is not covered by warranty.
- Regular cleaning is demand (dust, dirt, ...).

- Maintenance policy:
 Unplug mains before maintenance and at least 10 minutes cool off
 Appliance do not illegal open or demount
- Clean-up dust only from outer surface
- Use vacuum or dumpy duster (warm water)
- Before reinstalling to check failure-free state no wet parts!

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

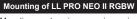

Mounting on stage is easy using various accessories as seen below. The brackets are connect by Camlocs.



Camloc 1/4 turn fasteners

- Safe mechanical quick release fastener systems
- Locking/unlocking by quarter turn Hand operated
- Service-friendly, time-saving and cost cutting
- Vibration-resistant



- Flexible and fix bracket









- Flexible bracket . standard delivery


- Fix bracket


Insertion or exchange of fluorescent tubes

It is not necessary to open the fixture for insertion or exchange of tubes. On both sides of the fixture are small cover pieces with 2 screws (Figure Nr. 2.1). Remove these small pieces on both sides of the LL PRO NEO light (Figure Nr. 2.2).

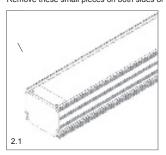

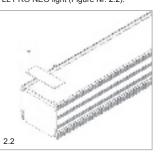

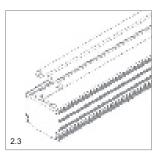

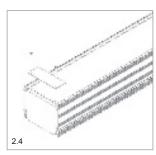

So you will get free space for insertion or exchange of fluorescent tubes (Figure Nr. 2.3). Carefully remove each of the tubes by rotating them (at the ends) until you are able to pull one end out, and then remove the entire tube. By remounting follow these instructions backwards (Figure Nr. 2.4).



