

Leader Light s.r.o. M.Gorkeho 33 SK-052 01 Spisska Nova Ves Slovakia www.leaderlight.eu

 
USER MANUAL

LL ARC SPLITTER G,B,W,N

COMPLIMENTS ON YOUR PURCHASE!



All dimensions are in millimeters



Following items are included:

- LL ARC SPLITTER G,B,W,N with 7x 6 pin LINE connector

1 pc.

- User manual

1 nc

Additional items needed:

- ARC DRIVER
- DC power supply 24V
- Controller compatible with DMX

Surface mounting:

- Screws and washers 4x M5, 2xM10

Content:

01 SAFETY INFORMATION

01.1 Protection from electric shock

01.2 Fire prevention

02 PRODUCT SPECIFICATION

02.1 Technical Specification

02.2 Top panel

03 INSTALLATION

03.1 Unpacking

03.2 Physical installation

03.3 Connecting to fixtures

03.4 Installation factors

04 MAINTENANCE

ENVIRONMENT



Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

01 SAFETY INFORMATION



WARNING!!!

Carefully read before installing, powering or servicing. Nothing to do if anything misunderstand! Installation can be done only by a qualified professional in accordance with relevant local codes.

01.1 Protection from electric shock

- Shut down power before installation or maintenance.
- Splitter, Luminaries, Driver and recommended power supply must be installed by a qualified professional in accordance with relevant local codes. Only acceptable source of power and frequency that complies with local building and electrical codes to use.
- Do not use or do not connect the products if the power cable, power plug or unit are any way damaged, wet, or if they are overheating.
- Do not modify, alter, or attempt to service the LeaderLight appliance. Doing so will void the warranty.
- Before removing or installing any cover or part of appliance disconnect from power.


Operation only with DC 24V source! By using a high voltage AC power supply - danger of electric shock!

01.2 Fire prevention


- Follow all safety considerations.
- Device never shield minimum distance around must be 100mm (4 in.).
- Allowing max. ambient temperature is 40°C (104°F).

02 PRODUCT SPECIFICATION

02.1 Technical Specification

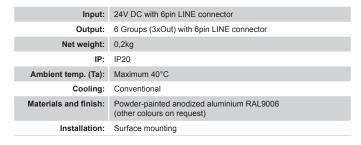

02.2 Top panel

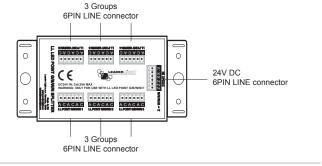

03 INSTALLATION

03.1 Unpacking

- Unpack carefully.
- This is electronic equipment and should be handled carefully.
- Damaged delivered package or if are any mechanical parts broken it must be claim immediately by the transport company. Photo pictures as evidence are valuable for

03.2 Physical installation

- Loading capacity of bearing area has to be at least 10 times the weight of all device clusters (splitter, driver, cables, ...).

03.3 Connecting to the fixtures

- To tackle all Safety Information- 01!
- You can suffer a dangerous electric shock by using a high voltage AC/DC power supply - by touching the AC/DC power supply wires inside LL ARC SPLITTER!
- LLARC SPLITTER use only with LLARC POINT.
 After installing the LLARC DRIVER you are ready to make the connections from fixtures to LL ARC SPLITTER.
- It is not necessary to open fixture before connecting to LL ARC SPLITTER.
- Pull the 6PIN line connector from the fixtures to the LL ARC SPLITTER output.
- LL ARC SPLITTER operate with LL ARC DRIVER.
- Connection ability see pictures "Electrical Connections" (Figure Nr. 1.1).

03.4 Installation factors

Connection conditions:

- · Each SPLITTER Out to fitting must be connected
- Maximal allowed current on SPLITTER Out is 3x0.35A
- · Never use more fittings as maximal allowed amound
- . LL ARC SPLITTER G,B,W,N is calculated only for LL ARC POINT OneColour G/B/W/N fixtures

WARNING!!!

LL ARC SPLITTER G,B,W,N operate only with LL ARC POINT OneColour G/B/W/N!


04 MAINTENANCE



- To tackle all Safety Information- 01!
- Damage caused by inadequate cleaning or maintenance is not covered by
- Regular cleaning is demand (dust. dirt. ...).

Maintenance policy:

- Unplug mains before maintenance and at least 10 minutes cool off
- Appliance do not illegal open or demount - Clean-up dust only from outer surface
- Use vacuum or dumpy duster (warm water)
- Before reinstalling to check failure-free state no wet parts!

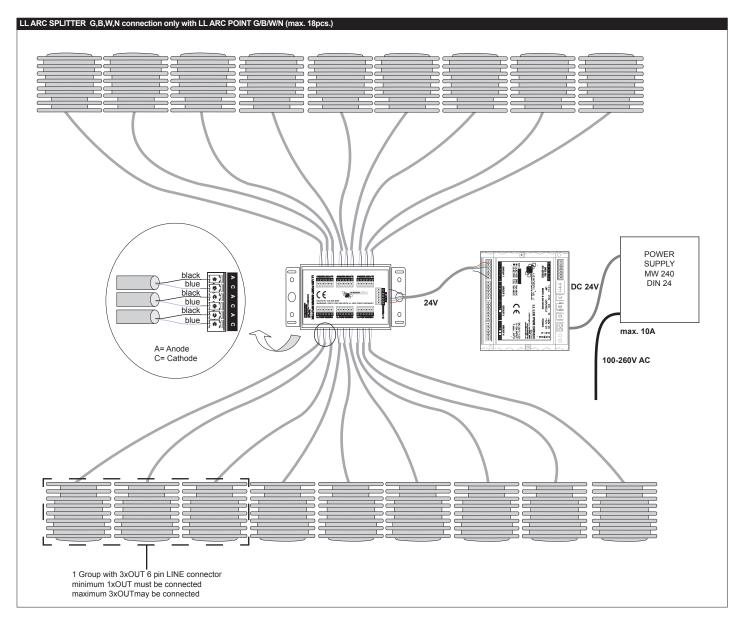

Wire colour to connector terminals

| Connector terminal | Wire colour |
|--------------------|--------------|
| A | Black |
| С | Green (Blue) |
| A | Black |
| С | Green (Blue) |
| A | Black |
| С | Green (Blue) |

Allowed amound of fixtures per SPLITTER

| Minimal | Maximal | Product name - fixture |
|---------|----------|--------------------------------|
| 6x1 pc. | 6x3 pcs. | LL ARC POINT OneColour G/B/W/N |

| Order code | Product name | |
|------------|-------------------------------|--|
| LL41 430 | LL ARC SPLITTER G,B,W,N 6xOut | |