

USER MANUAL



LL PRO NEO

LL05 400 LL05 420
LL05 440

COMPLIMENTS ON YOUR PURCHASE!



All dimensions are in millimeters

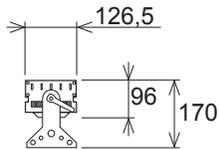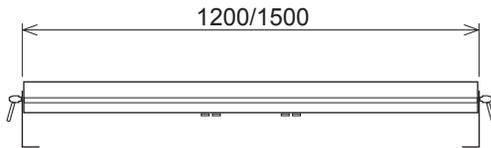

Following items are included:

- LL PRO NEO with RGBW T5 tubes and brackets 1 pc.
- Power plug PowerCon "A" and "B" 1 pc.
- User manual 1 pc.

Additional items needed:

- Data cables with XLR 5pin
- Controller DMX compatible
- Screws and washers 4xM

Content:

- 01 SAFETY INFORMATION**
 - 01.1 Protection from electric shock
 - 01.2 Fire prevention
- 02 PRODUCT SPECIFICATION**
 - 02.1 Technical Specification
 - 02.2 Back panel
- 03 INSTALLATION**
 - 03.1 Unpacking
 - 03.2 Physical installation
 - 03.3 Connecting to AC power
 - 03.4 Control data connecting
 - 03.5 DMX channels
- 04 MAINTENANCE**

01 SAFETY INFORMATION



WARNING!!!

Carefully read before installing, powering or servicing.
Nothing to do if anything misunderstand! Installation can be done only by a qualified professional in accordance with relevant local codes.

01.1 Protection from electric shock



- Shut down power before installation or maintenance.
- Luminaries and recommended AC power supply must be installed by a qualified professional in accordance with relevant local codes. Only acceptable source of AC power and frequency that complies with local building and electrical codes to use.
- Do not use or do not connect the products if the power cable, power plug or fixtures are any way damaged, wet, or if they are overheating.
- Do not modify, alter, or attempt to service the LeaderLight appliance. Doing so will void the warranty.
- Before removing or installing any cover or part of appliance disconnect it from AC power.
- Appliance always connect to earth (ettech.).

01.2 Fire prevention



- Follow all safety consideration.
- Thermostatic switches or fuses never to bypass.
- Device never shield – minimum distance around ventilating slot must be 50mm (2 in.).
- Allowing max. ambient temperature is 40°C (104°F).


02 PRODUCT SPECIFICATION

02.1 Technical Specification

Lamp type:	1500mm: 4xT5 HE 35W or HO 80W * 1200mm: 4xT5 HE 28W or HO 54W *
Lifetime:	20 000 hours
Gear:	IQ ballast ready for T5 HO or T5 HE DALI
Control data Input:	DMX 512 In/Out with XLR 5pin
Max. input power:	T5 28W:122W, T5 35W:150W, T5 54W:226W, T5 80W:330W
Power connection:	198-264V, 50/60Hz AC In/Out PowerCon
Net weight:	1500mm/1200mm: 11kg/10kg
IP:	IP20
Ambient temp. (Ta):	Maximum 40°C
Materials and finish:	Housing: powder-painted anodized aluminium in black (other colours on request)
Installation:	Surface mounting

* T5: ■ R-Red, ■ G-Green, ■ B-Blue, ■ W-White

02.2 Back panel

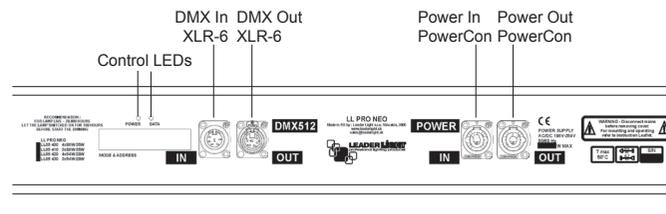

Control LEDs Indication

POWER ● DATA ●

LED	INDICATION	STATUS
POWER (Red)	blinking –1Hz	OK - inside fixture is everything correct
DATA (Green)	light off	NO DMX512 signal
DATA (Green)	blinking – 4Hz	OK- income correct DMX512 signal
DATA (Green)	fast blinking	NON correct digital signal
POWER (Red)	alternate blinking	Autotest function
DATA (Green)		

03 INSTALLATION

03.1 Unpacking

- Unpack carefully.
- This is electronic equipment and should be handled carefully.
- Damaged delivered package or if are any mechanical parts broken – it must be claim immediately by the transport company. Photo pictures as evidence are valuable for future claim.

03.2 Physical installation

- Loading capacity of bearing area has to be at least 10 times the weight of all device clusters (luminaries, clamps, cables, ...).
- Hairbreadth from combustible materials is 0,5m.



1. Installation adjustable brackets to body LL PRO NEO

RECOMENDATION !

Before start, in order to obtain the full 20.000 hour life time, new fluorescent tubes must be burned in for 100 hundred hours at full power.

03.3 Connecting to AC power



- **To tackle all Safety Information- 01!**
- For protection from electric shock, the device must be grounded (earthed)!
- It is not necessary to open the fixture before power supply. Power supply is solved simple with Neutrik PowerCon connectors.
- The fixture is equipped with auto-switching power supply that automatically adjusts to any 50-60Hz AC power source from 100-260V.
- Cord plug connections:

Symbol	Pin	Wire Colour	Screw (US)
L	live	brown	yellow or brass
N	neutral	blue	silver
	ground (earth)	yellow/green	green

03.4 Control data connecting

- Control data cable length is specified by Norm IEC929 Annex E4.
- It is not necessary to open the fixture before connecting of DMX512 control signal. Interconnections are realized by Neutrik XLR 5pin In/Out connectors.
- Pin connections:
 - Pin 1 – ground
 - Pin 2 – signal negative
 - Pin 3 – signal positive

03.5 DMX channels - subject to change


- The latest version of DMX channels appendix are on the websites - www.leaderlight.eu

Mode1: Dip2=Off, Dip3=Off

channel 1 = Red channel 4 = White 1
 channel 2 = Green channel 5 = Preheat (Dip3=On)
 channel 3 = Blue channel 6 = Master (Dip2=On)

DMX addressing and service functions :

 By DIP buttons 1 to 9 is preset digital address from 1 to 511.
 If is DIP buttons 1 to 9 ZERO and DIP button 10 ON, channels 1 to 5 will be set on a maximum for checking function ballasts and tubes.
 All DIP switch ZERO has generate a reset function (factory setting) if you switch off/on power supply.



Order code	Product name
LL05 400	LL PRO NEO TVD 4x80W/35W RGBW
LL05 420	LL PRO NEO TVD 4x54W/28W RGBW
LL05 440	LL PRO NEO TVD 4x54W/28W RGBW (USA version:120V/60Hz)

Accessories:

LL05 670	LL BRACKET PRO NEO 1500 LONG
LL05 672	LL BRACKET PRO NEO 1200 LONG
LL05 674	LL BARNDOOR PRO NEO 1500
LL05 676	LL BARNDOOR PRO NEO 1200
LL05 690	LL DIFFUSION GLASS PRO NEO 1500 (LL05 400)
LL05 692	LL DIFFUSION GLASS PRO NEO 1200 (LL05 420)
LL05 T5-8xx	LL T5 FILTER 80W - 10 colours (colour on request)
LL05 T5-5xx	LL T5 FILTER 54W - 10 colours (colour on request)

Note: delivery with lamps

04 MAINTENANCE

- To tackle all Safety information- 01!
- Damage caused by inadequate cleaning or maintenance is not covered by warranty.
- Regular cleaning is demand (dust, dirt, ...).



Maintenance policy:

- Unplug mains before maintenance and at least 10 minutes cool off
- Appliance do not illegal open or demount
- Clean-up dust only from outer surface
- Use vacuum or dumpy duster (warm water)
- Before reinstalling to check failure-free state – no wet parts!

ENVIRONMENT




Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Mounting of LL PRO NEO RGBW

Mounting on ceiling and wall is easy using various accessories as seen below (Figures Nr. 1.1 to 1.6). It is not necessary to open the fixture for mounting.



1.1 Mounting on ceiling

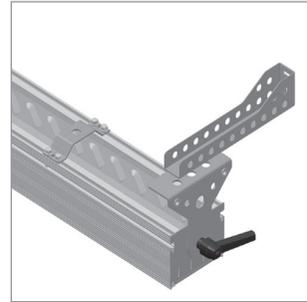

1.2 Mounting with wall bracket



1.3 Mounting with clamp



1.4 Mounting with hookclamp




1.5 Long bracket 1500 with clamps




1.6 Long bracket 1500 with hookclamps

Insertion or exchange of fluorescent tubes

It is not necessary to open the fixture for insertion or exchange of tubes. On both sides of the fixture are small cover pieces with 2 screws (Figure Nr. 2.1). Remove these small pieces on both sides of the LL PRO NEO light (Figure Nr. 2.2).

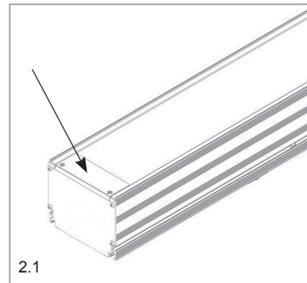


2.1

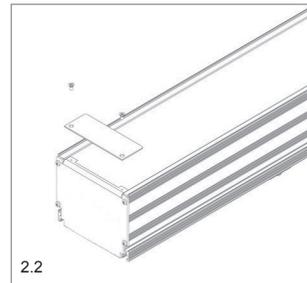

2.2



2.3

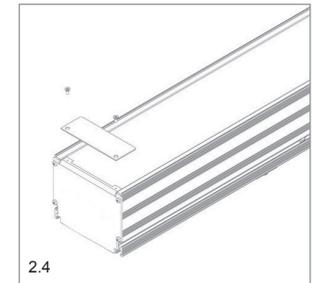


2.4

So you will get free space for insertion or exchange of fluorescent tubes (Figure Nr. 2.3). Carefully remove each of the tubes by rotating them (at the ends) until you are able to pull one end out, and then remove the entire tube. By remounting follow these instructions backwards (Figure Nr. 2.4).

Installation with LL accessories


Multiple installation to line or parallel is possible with L and U consoles. For fast and easy single installation is long bracket available.

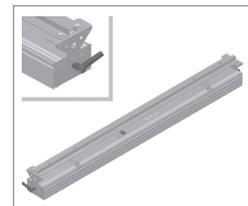


3.1. Instalation with long bracket 1500



3.2. Instalation with L console

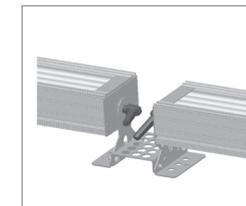

3.3. Instalation with U console

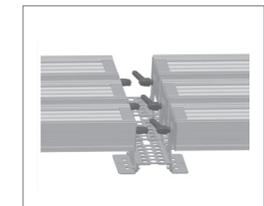

3.4. 3+3 connection by U and L consoles